







deli

deli
得力办公

重型打孔机

HEAVY DUTY PUNCH
No.0130

100张
冲纸张数

6孔

80孔

deli
得力办公





delix 得力 No. 0130

安全警告

1. 切勿将手指伸入进纸口或出纸口。
2. 切勿将手指伸入进纸口或出纸口。
3. 切勿将手指伸入进纸口或出纸口。
4. 切勿将手指伸入进纸口或出纸口。

警告

1. 请勿将手指伸入进纸口或出纸口。
2. 请勿将手指伸入进纸口或出纸口。
3. 请勿将手指伸入进纸口或出纸口。
4. 请勿将手指伸入进纸口或出纸口。

DELI 得力办公用品有限公司



deli









deli

EXPERT

HEAVY DUTY
PUNCH

0130

HEAVY DUTY PUNCH

0130



100 SHEETS



deli

EXPERT

0130

Heavy duty punching machine

100 sheets of paper punch number/labor-saving and fast hollow punch/carton design
Symmetrical ruler design/replaceable punch and punch washer



*由于拍摄光线等因素会影响到产品色差，请以实物为准

Basic parameters of punching machine

There may be an error of ± 1 mm in the measurement data



Name: Heavy duty punching machine	Item No: 0130
Specification: 164*120mm	Color: Black
Hole pitch: 80mm	Number of holes: 2 holes
Punch diameter: 6mm	Ability to play: <10mm (80g summer printing is about 100 sheets lower)

Labor-saving handle

Remove the punch fixture to change the punch

Rotatable punch gasket 2)

The ruler can be moved left and right

Large workbench



Deji 0130 re-hole heavy-duty punching machine accessories

① 得力0132打孔机配件冲头(银色)(2个) Deji 0152 hit the whole piece of my monthly accessories (gray) (October/pack)

Strong punching ability


Can bind 100 sheets of 30g copy paper at a time
aperture: 56mm 孔距: 80mm
Easy to operate, open the ruler and place the paper flat on the workbench Hold the handle with one hand and press down hard to perform punching operations



Adopt a brand new replaceable punch structure

Adopt a brand new punch structure (hollow knife) to achieve labor-saving effect

Replace the punch:
Make the punching machine completely in the state of bouncing off, and rotate the counter-chronograph.
Just take out the punch clamp

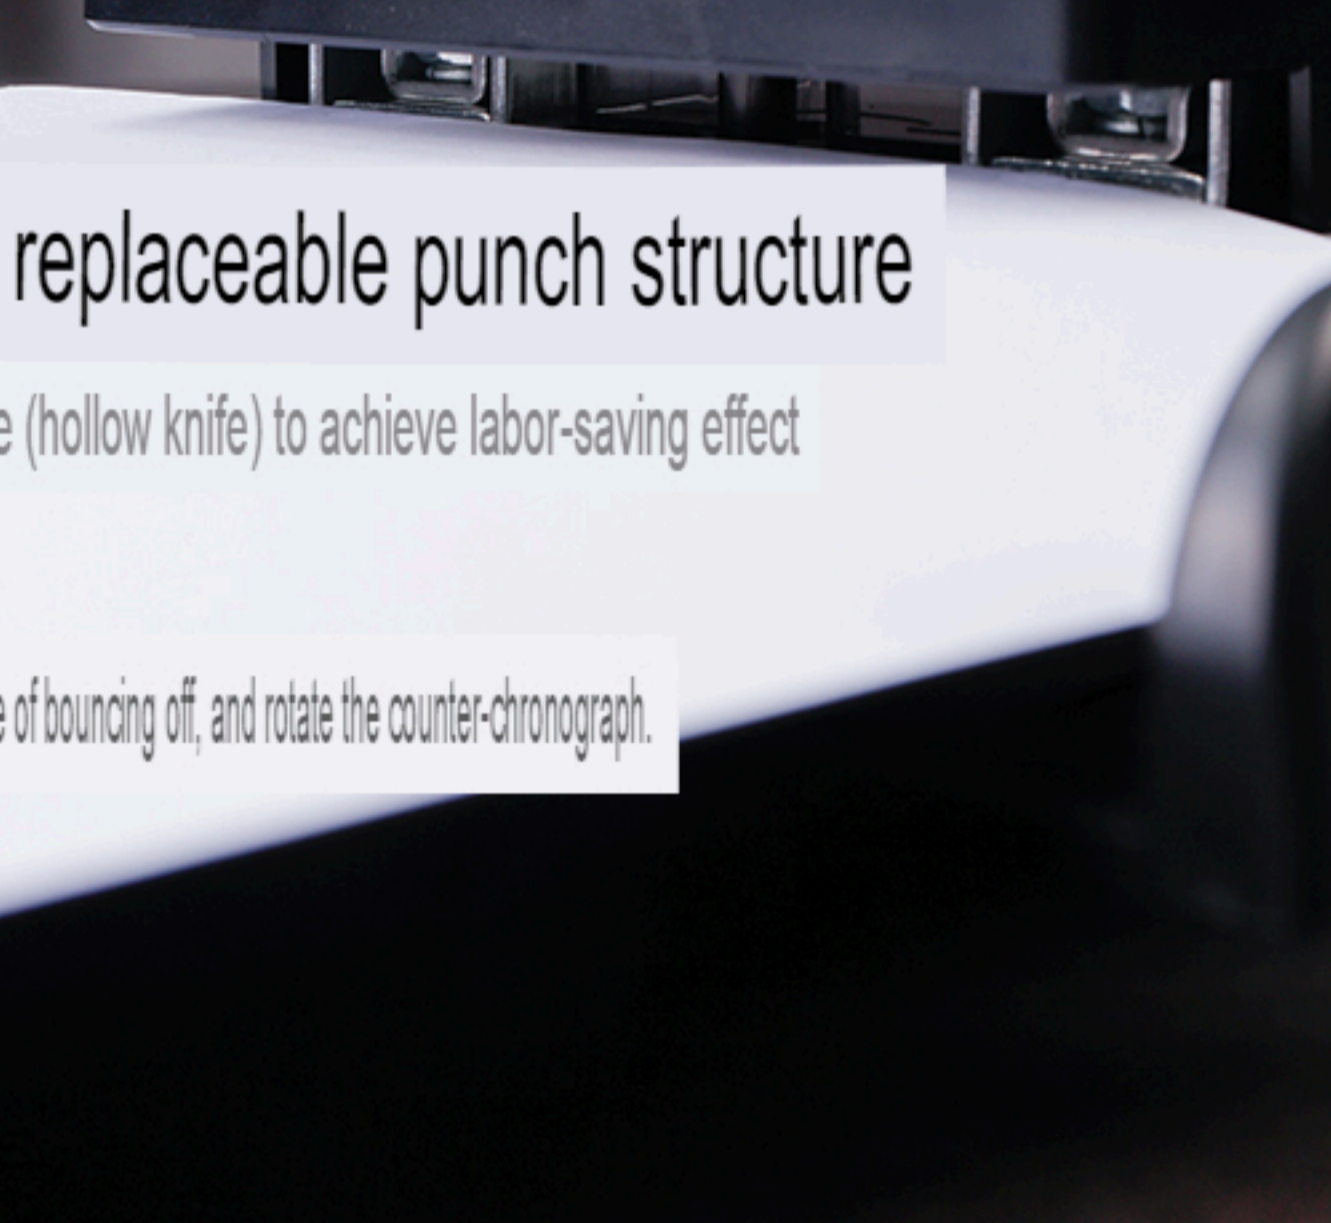

Symmetrical ruler design

Symmetrical ruler design makes it more convenient to locate the left and right of the sheet of paper
The ruler adopts a compression design, which can increase the placement surface when pressed down.



Punch protection gasket

Equipped with punch protection gasket to effectively protect the service life of the punch cutter head
When in use, rotate the punch gasket and place it under the punch intact.
Long-term work, punch gasket, easy to spend

Replace the punch gasket:
Pull the punch gasket out by hand (or with the help of a tool) to remove it. Replace with a new punch gasket



Confetti box design

The paper screen on the back is designed to flex, which is easy to use
Easy to clean up the paper screen in time

Paper screen:
Take out the flexion and remove the flexion box Drain the paper screen in the drawer

