

deli

Macaron

PASTEL COLLECTION



Mist

REFILLS
x10 per
5min

USE AS A FAN

Mist Blue

macaron deli



ELECTRIC ERASER H027 01



2 "AAA"

 
ELECTRIC ERASER H027 01

1


MINI FAN



take out the eraser and the plug



fix the fan blade with the plug and fit it back

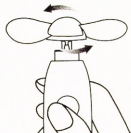


keep pressing the button so that the fan can work

2

ERASER



 take out the eraser and the fan




pull the eraser out for 4mm or replace the eraser and fit it back




keep pressing the button, the eraser will rotate for easily erasing


FIX BATTERY

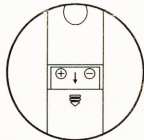

push as the arrow's direction to open the battery cover

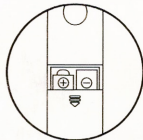

place 2 AAA batteries as the positive and negative identification

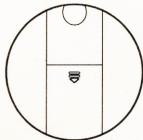

close the battery cover

GB:Erase pencil marks effortlessly. Clear stain, for highlighting use.

deli

Macaron

PASTEL COLLECTION

Mist Blue

REFILLS
5 X 10 pcs
5mm



ELECTRIC ERASER H027 01





macaron deli

deli

Maccaron

PASTEL COLLECTION



REFILLS
X 10 pcs
5mm



Coral Pink



Maccaron deli



ELECTRIC ERASER H027 01



