

deli

ELECTRIC

Macaron

PASTEL COLLECTION

Mist Blue



macaron deli

Mist Blue

ELECTRIC ERASER H028 00

ELECTRIC ERASER

H028 00

 


2 "AAA"


1 Diameter 5mm eraser replacement



Take out the eraser and the plug



Replace the $\phi 5\text{mm}$ eraser, pull the eraser out for 4mm and fit it back

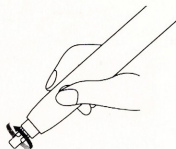

Keep pressing the button, the eraser will rotate for easily erasing


2 Diameter 2.5mm eraser replacement



Take out the eraser and the plug




Change the plastic plug and use the $\phi 2.5\text{mm}$ eraser

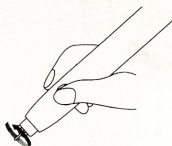


Keep pressing the button, the eraser will rotate for easily erasing


Fix battery

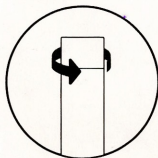

Open the battery cover as the arrow's direction

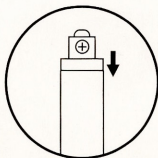

Place 2 AAA batteries, positive pole towards outside

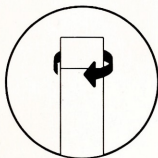

Close the battery cover as the arrow's direction

GB: Erase pencil marks effortlessly. Clear stain, for highlighting use.

deli

ELECTRIC

Macaron

PASTEL COLLECTION

FREE REFILLS

ø2.5mm | ø5mm
10PCS | 10PCS

Mist Blue

EFFORTLESSLY

ELECTRIC ERASER H028 00

deli

ELECTRIC

Macaron

PASTEL COLLECTION

Mint Green



macaron deli

Mint Green

ELECTRIC ERASER H028 00





