

How to load the staples ?

◆ Rear loading



1. Release and
remove pusher
rod



2. Load staples



3. Replace pusher
rod

2 in 1

