

**M&G**

AOMY8571

**12 pcs**

**PAINT**  
*marker*



**GOLDEN** *Applicable on* glass / plastic / ceramic / wood / metal / paper and other surfaces.



**M&G**

AOMY8571

**12 pcs**

**PAINT**  
marker



**RED**

**Applicable on** glass / plastic / ceramic / wood / metal / paper and other surfaces.

**M&G**

AOMY8571

**12 pcs**

**PAINT**  
*marker*



**SILVER**

**Applicable on** *glass / plastic / ceramic / wood / metal / paper and other surfaces.*

**M&G**

AOMY8571

**12 pcs**

**PAINT**  
*marker*



**GOLDEN** *Applicable on* glass / plastic / ceramic / wood / metal / paper and other surfaces.

**M&G**

AOMY8571

**12 pcs**

**PAINT** marker



**BLUE**

**Applicable on** glass / plastic / ceramic / wood / metal / paper and other surfaces.

**M&G**

AOMY8571

**12 pcs**

**PAINT**  
marker



**YELLOW**

**Applicable on** glass / plastic / ceramic / wood / metal / paper and other surfaces.

M&G

AOMY8571

12 pcs

**PAINT** marker



**GREEN**

**Applicable on** glass / plastic / ceramic / wood / metal / paper and other surfaces.



**M&G**

AOMY8571

**12 pcs**

**PAINT**  
marker



**RED**

**Applicable on** glass / plastic / ceramic / wood / metal / paper and other surfaces.



**shake**



**release air**



**press**



**write**

1. Shake well before use.
2. Press down the nib and hold for 3 or 4 seconds to release air.
3. Press the nib several times until the ink appears.
4. Try a line on the paper.
5. Start using best quality paint marker