



Fight identity thefts, financial frauds & industrial espionage

ShredMaster 150M

Micro Cut Personal Auto Feed Shredder

A new range of fully automatic paper shredders equipped with long run times (and fan cooling), intuitive touch controls and anti jam technology. Designed to put time back in your day by eliminating the cumbersome task of manually feeding your shredder. Simply load the shredder with paper, close the lid and walk away. The automatic shredder starts shredding while you get on with something else.

Features & Benefits

- 2 x 15 mm Micro cut, P-5 security level for high security documents
- Automatic feed for minimal human intervention
- Shreds up to 150 sheets from the auto-feed chamber and up to 6 sheets through the manual feed slot
- Simple and intuitive touch control operation
- Anti-jam technology automatically stops and reverses when too much paper is inserted
- Easy to empty 44L pull out bin with viewing window
- Shreds credit cards



Technical Specifications

Cutting style	Micro Cut	Sound Level (db)	55 +/- 3
Shred capacity (70 gsm)	TBA	Working cycle On/Off	30 min ON/45 min OFF
Shred capacity (80 gsm)	150 (6 bypass)	Weight (kg)	15.44
DIN security level	S4 / P-5	Staples	Yes
Shred size (mm)	2 x 15	Paper clips	Yes
Shred speed (m/min)	1.8	Credit cards	Yes
Dimensions (mm) H x W x D	617 x 365 x 434	CD's	No
Working width (mm)	227	Auto Oiling	No
Bin capacity (Cu., litre)	44	Power Consumption (watts)	235

Safety



Please read and keep these important safety instructions.



The following symbol which is found on the product indicates you could be seriously hurt or killed if you open the machine.
DO NOT OPEN.



WARNING
Electrical shock hazard.
Do not open. No user serviceable parts inside.
Refer servicing to qualified service personnel.



For a full copy of the operating instructions, hints & tips and troubleshooting guide, please visit www.gbc.com.



Warning: Do not touch cutters, beware of sharp edges.



Warning: Moving parts hazard, keep hands away from rollers whilst in operation.











The power cord must be connected to a socket-outlet with earthing connection.

- Please read all the safety information and the instructions; the manufacturer is not liable for cases of material damage or personal injury caused by incorrect handling or non-compliance with the safety instructions. In such cases, the warranty will be voided.
- Only use the unit for its intended purpose.
- Do NOT load the auto-feed chamber with unopened junk mail, magazines, bound documents etc.
- The unit must only be connected to a supply voltage corresponding to the electrical rating shown on the unit.
- Do NOT alter the attachment plug. The plug is configured for the appropriate electrical supply.
- Unit should be connected to a socket outlet near the equipment that is easily accessible. Ensure the cable is not likely to trip up a passer by.
- Do not connect multiple adaptors or use with an extension cable.
- Do not attempt to service or repair the unit yourself. Please return to supplier.
- If recycling, separate paper and credit card shreds.
- Do not use this unit if the cable or plug have been damaged, after it malfunctions, or after it has been damaged in any manner.
- Unplug your shredder before moving it or when it is not in use for an extended period of time.
- Care should be taken when moving equipment to avoid any unlevelled surfaces.
- Lock casters in place, if lock provided.
- Keep power cord away from casters. Casters can damage the power cord. If power cord insulation is damaged, disconnect the plug from the wall socket.
- The device is intended for use indoors. Never use outdoors.
- Keep the device away from moisture.
- Be vigilant at all times, and always be careful what you are doing. Do not use electrical equipment if you are lacking in concentration or awareness, or are under the influence of drugs, alcohol or medication. Even a moment of inattentiveness can lead to serious injuries when using electrical equipment.
- Do not attempt to open, modify or repair the device. Do not drop, puncture, break or expose to high pressure.
- Alterations to the device and technical modifications are not permitted.
- Check the device and cable (and if applicable, the adapter) for any damage before use. If there is any visible damage, a strong odour, or excessive overheating of components, unplug all the components immediately and stop using the device.
- Shredder must be disconnected from power source if not used for an extended period of time.
- Do not use spray cleaners or spray lubricants as these may present a risk of flash fire.
- Never bypass the safety interlock (strictly forbidden and dangerous, especially when unit is connected to a power source).
- Do not lean on the shredder door; this may damage the door and will not be covered by your warranty.
- Failure to follow these instructions could result in damage/injury and will invalidate your warranty.
- Although this shredder has been designed to comply with UL 62368 – EN 62368 safety standards including the "probe accessibility tests", do not operate the shredder near children or pets.

Technical Specifications

Cutting style	Micro Cut	Sound Level (db)	55 +/- 3
Shred capacity (70 gsm)	TBA	Working cycle On/Off	30 min ON/45 min OFF
Shred capacity (80 gsm)	150 (6 bypass)	Weight (kg)	15.44
DIN security level	S4 / P-5	Staples	Yes
Shred size (mm)	2 x 15	Paper clips	Yes
Shred speed (m/min)	1.8	Credit cards	Yes
Dimensions (mm) H x W x D	617 x 365 x 434	CD's	No
Working width (mm)	227	Auto Oiling	No
Bin capacity (Cu., litre)	44	Power Consumption (watts)	235

Buttons & Indicators

Control Buttons		Auto-start and stand-by button (press one time)	All Models
		Manual reverse button (hold down)	
		Manual forward run button (hold down)	
Status Indicators		Ready indication	
		Over heating indication (Allow to cool)	
		Overloaded / Jam indication (Reduce sheet / remove jam)	
		Bin full indication (open door and empty the bin)	
		Door open or shredder head removed indication (close door firmly or replace head on bin)	

Warning Symbols



Warning symbols



Keep loose jewellery clear



Ties and loose clothing hazard



Keep long hair clear



Do not reach into opening



This equipment is not intended for use by children



No aerosols. Do not use spray cleaners or lubricants, as these may present a risk of flash fire.



Max sheet capacity



No CDs



No heavy duty staples above 1 inch / 26 mm



Warning: moving parts

Hopper Filling Symbols



Maximum sheet level



Warning: no heavy duty staples above 1 inch / 26 mm



Warning: no more than 25 sheets stapled together



Warning: no bound documents



Warning: no multiple folded sheets



Warning: no paperclips above 1.25 inch / 32 mm



Warning: no plastic sheets



Warning: no unopened mail



Warning: no magazines



Warning: no paper or card above 200gsm