 












TG-167CD
Paper Shredder



IMPORTANT safety measures :



1. Always be sure to keep all loose objects such as e.g. clothing, ties  , jewellery  , hair  and all other small objects away from the feed slot in order to avoid injury.
2. Disconnect the mains plug in the event the document shredder is not be used for a long period of time.
3. Remove all paper clips and staples  before inserting the paper.
4. Always be sure to keep your fingers and hands  away from the feed slot in order to avoid serious injury.
5. The device should be setup as close as possible to an easily accessible wall socket.
6. The document shredder must always be deactivated and disconnected from the electrical line prior to moving, transporting and cleaning the device and prior to emptying the waste basket.
7. Empty the waste basket frequently. Otherwise the shredder may jam. Please disconnect the mains plug in order to empty the basket.
8. The document shredder is not suitable for shredding cassettes resp. diskettes.
9. Please do not leave the document shredder unattended e.g. in the event children  or pets are nearby.
10. The document shredder is only suitable for shredding paper, please do not insert any other materials, the paper must be dry and clean.
11. Never open the casing. In the event of problems with the device, please contact our hotline.
12. The device may not be operated with a damaged power cord.
13. Please read the manual before operating the machine  .
14. For indoor use only.
15. Please do not spray any flammable gas or oil  onto this shredder, it may cause fire.
16. The device should be setup as close as possible to an easily accessible wall socket.

Setting up the document shredder:

1. Please first insert the collecting tray (for CDs/DVDs) in the waste basket.
2. Securely mount the document shredder on the waste basket. In the process, ensure that you do not catch your fingers between the top edge of the waste basket and the shredder.

Important note:

The document shredder can only be set on one side of the basket. Ensure that the document shredder is properly fitted onto the basket.

3. Connect the mains plug to a standard 220-240 volt AC socket.

Starting the document shredder:

The sliding switch is located on the top side of the unit and can be set to three (3) positions.

1. **AUTO** position: the shredding operation starts automatically as soon as the paper to be shredded is inserted in the feed slot. After the shredding operation is complete, the device will automatically deactivate.
2. **REV** features the following two functions:
 - a) Rectifying a paper jam. In this case, the direction of the shredding operation is reversed before the work cycle ends in order to free the shredding blades. Should you determine that too much paper has been inserted and the shredding operation slows noticeably, immediately set the switch to this position, also in the event paper is accidentally inserted.
 - b) Shredding CDs/DVDs and credit cards: Insert an individual CD/DVD or credit card in the designated feed slot on the shredder.
3. In order to empty the waste basket or in the event the device is not used for a prolonged period of time, the switch should be set to **OFF** and the device should be disconnected from the electrical line.

This device is designed solely for private use in enclosed quarters and for brief operation not exceeding 2 minutes. Do not use the document shredder for commercial applications nor outdoors.

Capacity of the document shredder:

The C116-A shreds up to 7 sheets of paper (DIN A4, 70g). The paper width may comprise up to 22 cm. When shredding small paper sizes such as letters or credit card receipts, please insert them into the middle of the shredding slot.

Separate shredder for CD's and credit cards:

This document shredder is equipped with a separate shredder for CDs/DVDs and credit cards. CDs/DVDs are shredded into 4 pieces. Given that such materials always present the risk of splinters, please keep your face at an acceptable distance when inserting CDs/DVDs. The shredded material is then collected in a separate tray thereby facilitating its environmentally-friendly disposal.

Protection against paper jams and overloading:

The C116-A is equipped with a motor overload guard. The normal work cycle for the shredding operation takes 2 minutes with a maximum load, after which a prolonged break must be taken. Under the following conditions, the current feed to the unit's motor is interrupted:

1. Continual operation of the document shredder with maximum capacity for a prolonged period of time, e.g. longer than 2 minutes without interruption.
2. Overrunning the shredding capacity e.g. adding more than 7 sheets of paper (70g) in one operation or in the event the paper is not inserted length-wise into the feed slot.

Under the above-mentioned conditions, the automatic overload guard of the motor is triggered, whereupon the current feed to the device is interrupted. In such a case, please take the following steps:

1. Disconnect the mains plug from the AC socket and wait at least 60 minutes until the overload guard has reset. Now tear off excess paper from the top of the shredder or remove it.
2. Reconnect the mains plug to the AC socket and set the switch to the REV position. Pull the remaining paper away from the shredding blades. Afterwards, set the switch back to the AUTO position. If necessary, repeat this step.
3. With the switch in the AUTO position and the open feed slot, you may now continue the normal shredding process.

Technical data:

Shredding type:	Cross-cut
Size of cut:	4 x 45 mm (paper), 4 pieces (CD/DVD or credit card)
Shredding capacity:	7 pages DIN A4 (70g), 1 CD/DVD or credit card
Feed width:	220 mm
Feed width for CDs/DVDs:	120 mm
Input voltage:	220-240 volt alternating current, 60 Hz, 1.2 A
Dimensions:	335 x 180 x 392 mm
Waste basket:	15L
Operating cycle:	2 min. ON, 60 min. OFF