



-One-click stretching, quick installation in seconds

iii



Open the file box :

Hold both sides in your hand and move the file frame to
Pull apart on both sides




Insert the fixed cover :

After stretching, insert it up and down
[Fixed cover





168mm

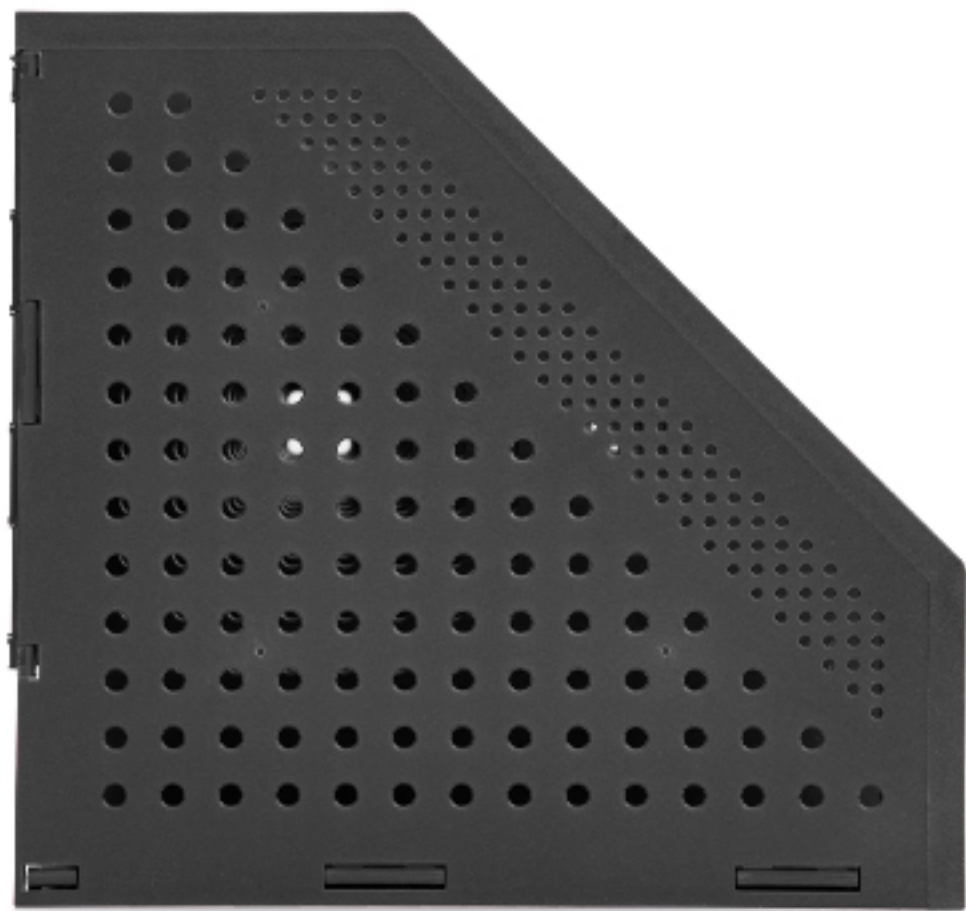

255mm

243mm



一键拉伸 秒速安装

山



1

拉开文件框

手握两侧，将文件框向
两侧拉开



2

插入固定盖

拉伸完毕后，上下插入
固定盖




3.0mm

板面加厚

PP

结构稳固

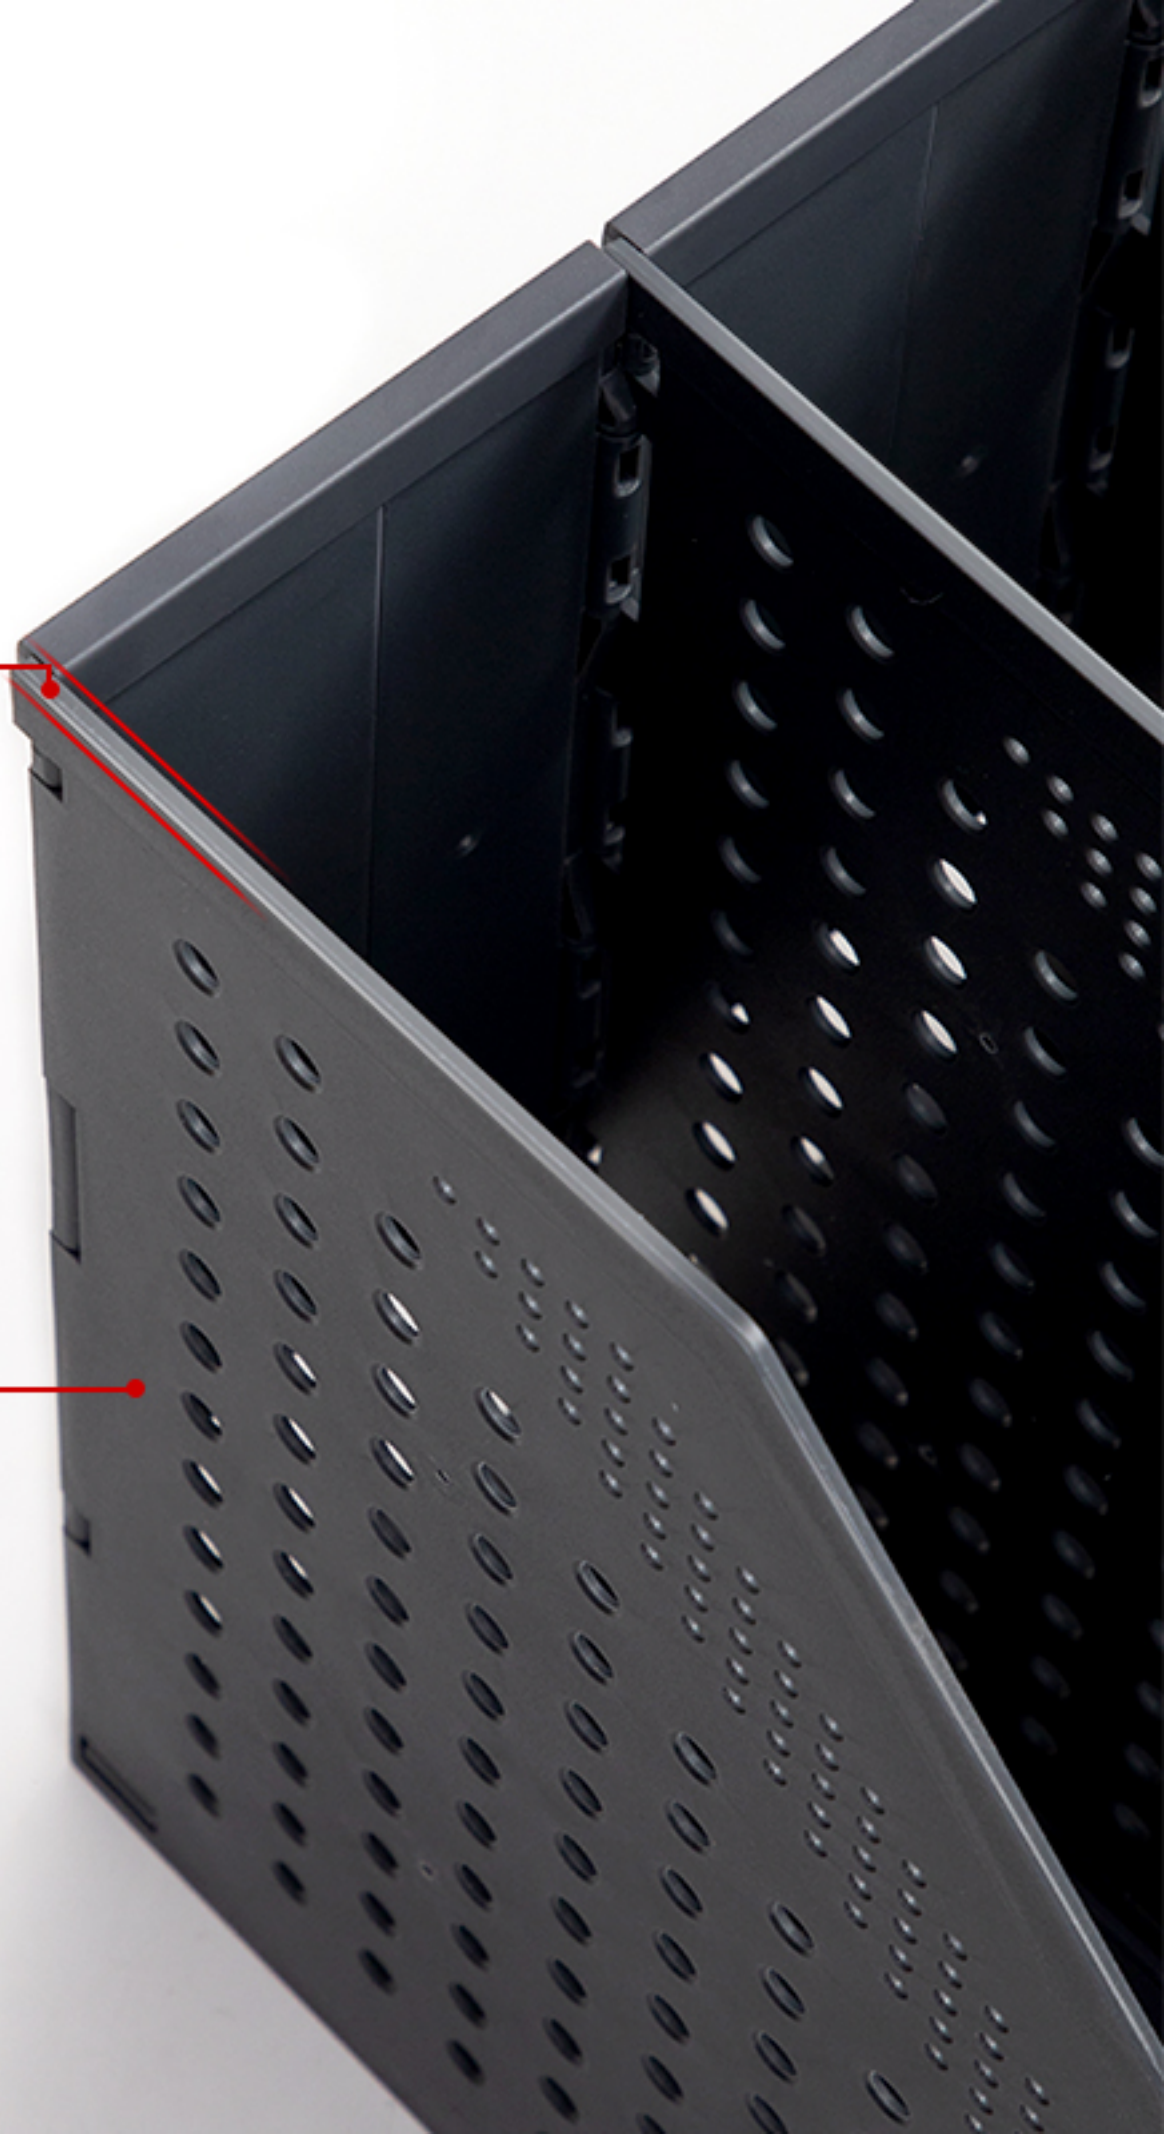



镂空设计

